

Thank you for purchasing Waveform Lighting's LED shop light. Please carefully read the installation instructions prior to installation and use.

! WARNING:

- Carefully read the installation instructions and product labels before installing the LED shop light.
- Risk of fire or electric shock. Improper installation can result in electric shock or fire.
- Rated for use in dry or damp locations only. Do not use where directly exposed to water or weather. Not-submersible (not water tight).
- Turn off all power to the fixture before inspection, installation, or removal.
- Do not open or disassemble the LED fixture – no user-serviceable parts inside.



INSTALLATION INSTRUCTIONS

Step 1

Locate the two sets of openings along the top of the fixture. They are located approximately 7 inches (18 cm) from the ends of the fixture.

Step 2

Starting with the openings on one end of the fixture, locate the included "S" hook and insert the smaller end of the hook into the opening.

Step 3

Loop the hanging chain through the larger end of the "S" hook, and ensure that the hanging chain is securely connected to the shop light fixture via the "S" hook.

Step 4

Repeat steps 2 and 3 with the openings on the other end of the fixture.

Step 5

Hang the shop light fixture from the final mounting location. Double check that the shop light fixture is secure, and that the mounting location can safely support the weight of the fixture.

Step 6

Plug the fixture into a standard 3-prong outlet, and turn the light fixture on by pulling on the pull-chain located at the end of the fixture.




DAISY-CHAIN INSTALLATION INSTRUCTIONS (OPTIONAL)

When installing multiple shop light units, individual fixtures can be linked together in a "daisy chain" configuration. This is a convenient installation method that can reduce the amount of wire cables as well as power receptacles needed.

THE MAXIMUM PERMITTED DAISY-CHAIN QUANTITY IS 8 FIXTURES. DO NOT EXCEED 8 FIXTURES IN ANY SINGLE DAISY-CHAIN CONNECTION.

At the opposite end of the pull-chain is a 3-prong plug receptacle. Simply plug power cord from the second fixture into the first fixture's receptacle, and repeat this process as needed for subsequent fixtures.

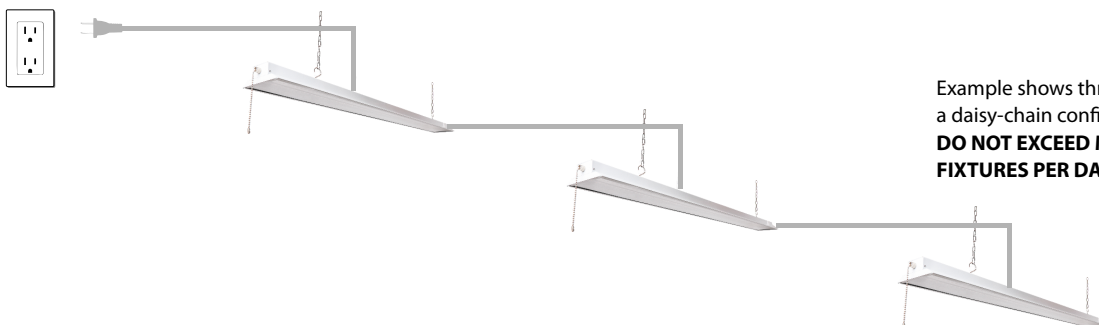

Example shows three fixtures in a daisy-chain configuration. **DO NOT EXCEED MORE THAN 8 FIXTURES PER DAISY-CHAIN.**

PRODUCT SPECIFICATIONS

Wattage	42 watts
Brightness	4200 lm
Color	95 CRI / 4000K 5000K 6500K
Input Voltage	AC 120 volts / 60 Hz
Dimensions	46.5" x 4.2" x 1.7" (118.2 cm x 10.6 cm x 4.3 cm)
Weight	3.2 lbs (1.5 kg)
Power Cable Length	60" (152 cm)